
Steelcase Series 2

Steelcase Series 2 is the attainable, high-performing task chair that can be personalized with extensive style choices. Its bakcrest signals comfort and sophisticated support, while the slim profile and light scale look can help optimize any space. The back features an innovative geometric design that flexes in two dimensions to provide continuous support for the spine.

Back frame and seat shell are plastic. Fabric back cover and horizontal back are available as options on fully upholstered versions.

Lumbar height adjusts 95mm.


Air LiveBack technology works through an innovative geometric design that flexes in two dimensions as the user moves to create responsive, personalized comfort and fit.

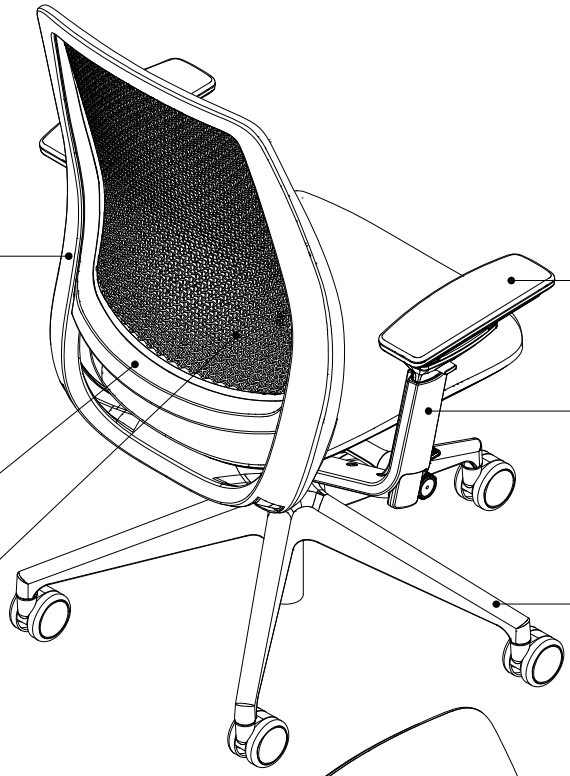

Arm width adjusts 57mm in each direction.

Arm height can adjust independently within a 102mm range to help relieve upper back and shoulder fatigue.

Five-arm base is available in plastic or polished aluminum.

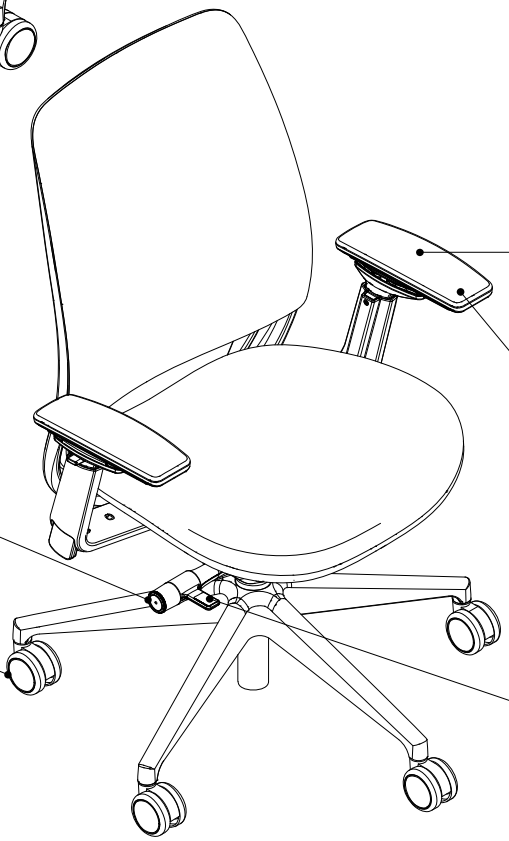

Arm depth can be adjusted approximately 76mm.


Arm caps can pivot 30° inwardly and outwardly.

Comfort dial provides three settings for the user's personal preference and work style.

Casters have hard, dual-wheels that roll smoothly on carpets. They are 65mm for increased mobility. Soft, dual-wheel roll-control casters are available as an option for use on hard floors or chair mats.
Tip: Do not roll the chair across asphalt during installation as this may damage the casters.


Seat depth adjusts within a 64mm range.

Product Details

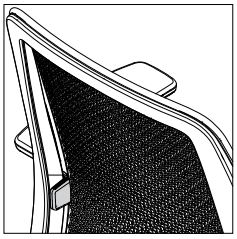


Integrated LiveBack System automatically creates the flexibility and movement in the backrest to ensure dynamic back support during recline. Height-adjustable lumbar comes standard on Steelcase Series 2.

Steelcase Series 2 is available in four back types: plastic air back, 3D Microknit, fully upholstered, and quilted upholstery. A fabric back cover is also available on fully upholstered versions.

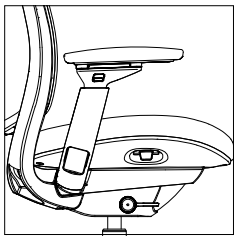

Advanced weight-activated mechanism with a natural fluid motion keeps users oriented to their work.

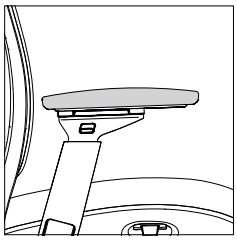


Rectilinear arms with soft caps are standard.

Adjustment Features


Adjustability instructions are included with every chair.

Seat Adjustments

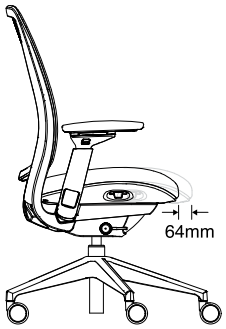


Seat depth adjusts 64mm (393mm–457mm) by pulling handle up. Slide seat forward or back to accommodate various leg lengths. Release handle to lock. This feature is standard on Steelcase Series 2 work chairs and stools.

Back Adjustments

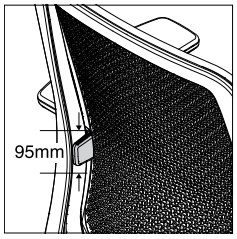


Lumbar height adjusts 95mm (159mm to 254mm from seat) by grabbing exposed tabs and sliding the lumbar support up or down. This feature is standard on Steelcase Series 2 work chairs and stools.

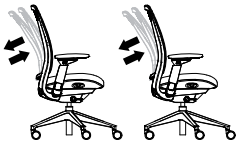




Comfort Dial has three settings: (1) weight-activated setting; (2 boosted setting that has more resistance than your body is providing; (3) an upright back lock setting.

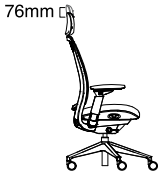


Headrest adjusts 76mm vertically to support the head and neck of the user in both upright and recline postures. The plastic stalk and underside of the headrest will coordinate to match the frame color specified: black, seagull or sterling dark. The foam pad of the headrest is available in all upholstery currently approved on seat and back.

Arm Adjustments


Rectilinear height, width, pivot, and depth-adjustable arms come standard on all arm models of chairs and stools.

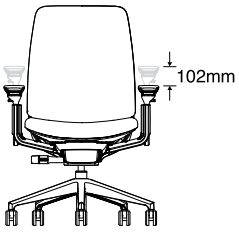


Arm height adjusts independently within a range of 102mm (178mm–279mm from the seat). Push button on outside and under arm cap in while moving arms up or down. Releasing buttons locks arms in position.

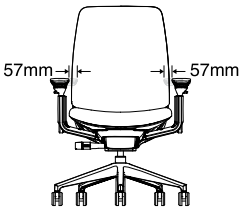

Arm width adjusts 57mm in each direction.

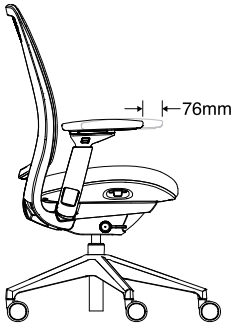


Arm depth adjusts approximately 76mm to enable user to get closer to worksurface.

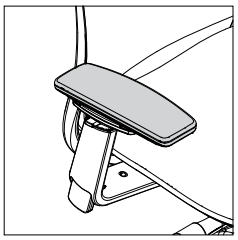


Arms pivot independently, 30° inward and outward. Grasp arm and push front to left or right.

Other Features

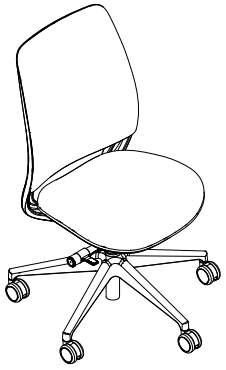

Armless models are also available.

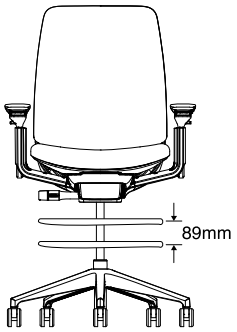

Foot ring height on stools adjusts by rotating it counterclockwise to unlock. Then raise or lower ring to desired position before rotating it clockwise to lock. The foot ring has a diameter of 508mm.

Hard, dual-wheeled casters are standard. Soft, dual-wheel roll-control casters are available as an option. Glides are also available as an option.

Soft dual-wheel roll-control casters feature an internal brake that activates when the chair is not under load to reduce shifting when user stands up.

Dimensions

Steelcase Series 2

Features	Overall Depth	Width	Height	Seat Depth	Functional Seat Depth	Seat Width	Seat Height From Floor	Ring Height From Floor	Back Width	Back Height From Seat
Steelcase Series 2										
Chairs										
Arms	489mm to 559mm	698mm	965mm to 1080mm	Adjustable 70mm	356mm to 451mm	483mm	420mm to 545mm	N.A.	479mm	572mm
Stools										
	489mm to 559mm	698mm	1130mm to 1321mm	Adjustable 70mm	356mm to 451mm	483mm	585mm to 780mm	292mm to 381mm	479mm	572mm

Tip: Coat hanger can only be installed on stools with a polished aluminum base.

Note: Dimensions were measured with BIFMA CMD (chair measuring device).

